



Parts of the SPT 1700

The following illustration indicates each part of the SPT 1700 Terminal.

Front View

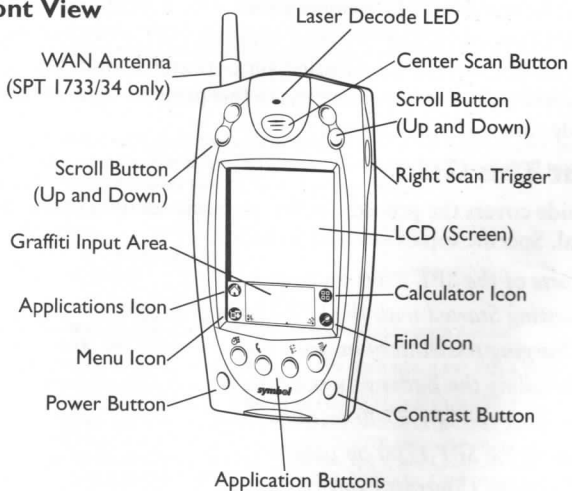


Left View

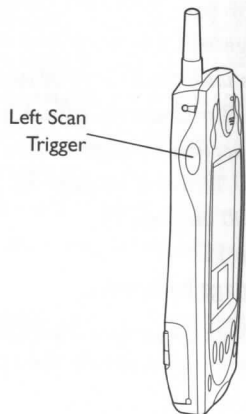


Parts of the SPT 1700 (continued)

Back View

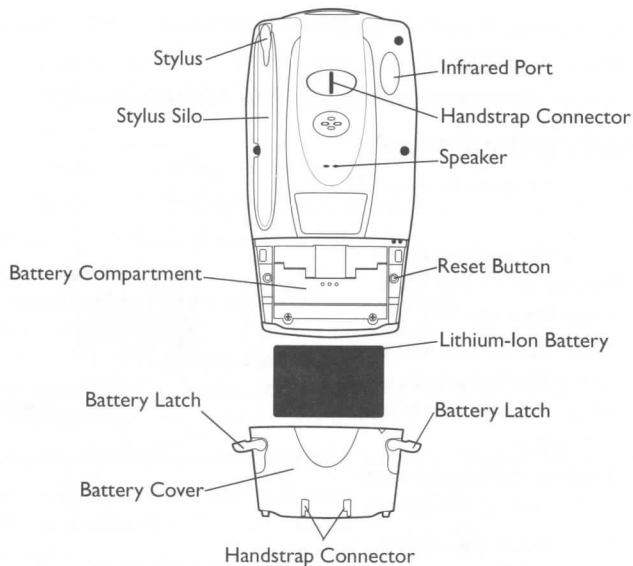


Top View

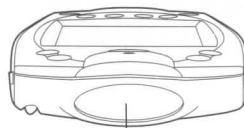

Scanner Exit Window

Bottom View

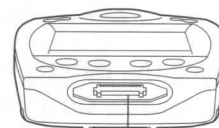

Serial Port

Getting Started with the SPT 1700

Before you can use your SPT 1700, perform the basic set up procedures covered on the following pages. Specifically:


- Charge and Install the Battery
- Start the SPT 1700
- Initiate the network connection (SPT 174X/173X only).

Installing the Battery

To install the battery in your SPT 1700:

1. Open the latches on the battery cover and lift it away from the SPT 1700.
2. Insert the lithium-ion battery in the battery compartment, making sure it snaps into place.
3. Replace the battery cover and re-secure the latches.

Note: Be careful to position the battery latches completely open while securing the battery cover.

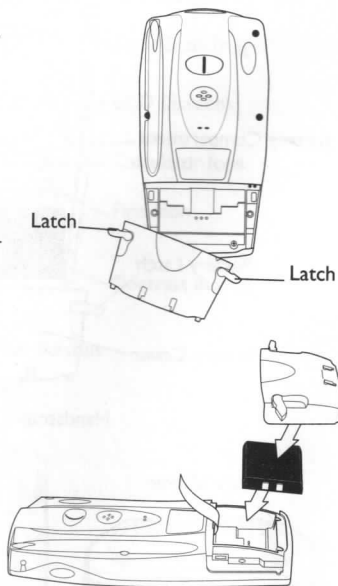

Charging the Battery


Before using your SPT 1700 for the first time, charge the lithium-ion battery using the Cradle, the Synchronization/Charging Cable, or the Universal Battery Charger (UBC). For instructions on using the UBC, see the UBC Quick Reference Guide. Follow these same procedures to recharge the battery.

Note: The SPT 1700 battery (p/n 20-36098-01/ model number 1UF103450) must be used only with the SPT 1700 series terminal.

Using the Cradle to Charge the Battery

To charge the terminal's battery using the cradle:

1. Make sure the battery is installed in the terminal.
2. Plug the cradle into a wall outlet.
3. Insert the SPT 1700 terminal in the cradle:

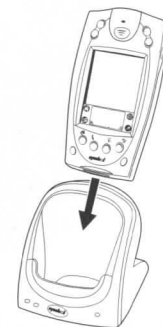

The terminal's battery is fully charged after approximately two hours. You can also charge a terminal's spare battery by inserting it in the spare battery charging slot on the back of the cradle. The spare battery fully charges in approximately two hours. See the *CRD 1700 Cradle Quick Reference Guide* for more information.

Using the Synchronization/Charging Cable to Charge the Battery

To charge the terminal's battery using the Synchronization/Charging Cable:

1. Make sure the battery is installed in the terminal.
2. Insert the cable into the bottom of the terminal.

